

Please Read and Save this Use and Care Book

Veuillez lire et conserver ce guide d'entretien et d'utilisation



12-Cup Adjustable Brew Strength Coffeemaker

Cafetière de 12 tasses avec réglage du degré d'infusion

IMPORTANT / IMPORTANT

WASH CARAFE BEFORE FIRST USE!

LAVER LA CARAFE AVANT
LA PREMIÈRE UTILISATION!

* Filters not included.
* Filtres non compris.



USA/Canada

1-800-231-9786

www.prodprotect.com/applica

Accessories/Parts (USA/Canada)
Accessoires/Pièces (É.-U./Canada)
1-800-738-0245

Model
Modèle

□ CM9050C

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- ☐ Read all instructions.
- ☐ Do not touch hot surfaces. Use handles or knobs.
- ☐ To protect against fire, electric shock and injury to persons do not immerse cord, plugs or appliance in water or other liquid.
- ☐ Close supervision is necessary when any appliance is used by or near children.
- ☐ Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- ☐ Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment. Or, call the appropriate toll-free number on the cover of this manual.
- ☐ The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- ☐ Do not use outdoors.
- ☐ Do not let cord hang over edge of table or counter, or touch hot surfaces.
- ☐ Do not place on or near a hot gas or electric burner, or in a heated oven.
- ☐ To disconnect, turn any control to OFF, then remove plug from wall outlet.
- ☐ Do not use this appliance for other than intended use.
- ☐ Keep lid on the carafe when in use.
- ☐ Scalding may occur if the lid is removed during the brewing cycles.
- ☐ Do not use a cracked having a loose or weakened handle.
- ☐ The carafe is designed to be used only on the warming plate of your coffeemaker. It must never be used on a range top.
- ☐ Do not place hot carafe on cool or wet surface.
- ☐ Do not clean the carafe with steel wool pads, cleanser, or any other materials that may scratch.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

POLARIZED PLUG (120V Models Only)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

TAMPER-RESISTANT SCREW

Warning : This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

ELECTRICAL CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 - c) If a long detachable power-supply cord or extension cord is used,
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance,
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
 - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel. In Latin America, by an authorized service center.

TABLE OF CONTENTS


	Pages
Getting Familiar With Your Unit.....	4
Control Panel	5
How To Use.....	6
Adjusting Power Cord Length	6
Setting The Clock	6
Brewing Coffee.....	7
Sneak-a-cup® Interrupt Feature	8
Adjustable Keep Warm Carafe Plate	8
Brewing 1 – 4 Cups	8
Time Since Brewed Feature	8
Delayed Brewing.....	8
Coffee Brewing Tips	9
Care And Cleaning	10
Auto Clean Decalcification Setting	10
Troubleshooting	11

INTRODUCTION

Congratulations on the purchase of your new Black & Decker® 12-Cup Adjustable Brew Strength Coffeemaker! We'd like to take a moment to thank you for choosing Black & Decker® and tell you about some of the unique features of your new coffeemaker that will make your coffee making experience better, including: adjustable brew strength, an adjustable keep warm carafe plate, a 1 – 4 cup brewing option, and an auto clean function.

GETTING FAMILIAR WITH YOUR UNIT

Product may vary slightly from what is illustrated.

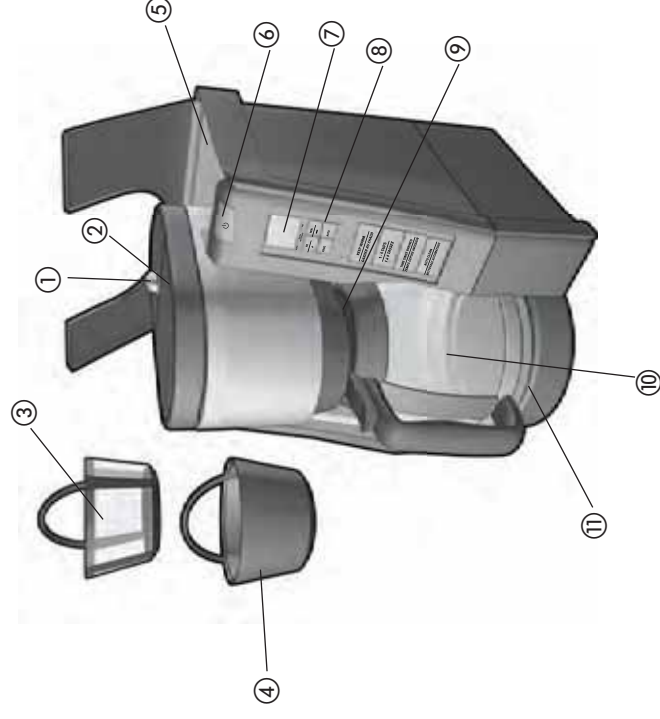


- + 1. Brew strength selection knob
(Part # CM9050C-01)
- 2. Brew basket lid
- + 3. Permanent gold tone filter
(Part # CM9050C-02)
- + 4. Removable brew basket
(Part # CM9050C-03)
- 5. Water reservoir
- 6. Power ON/OFF button
- 7. LED digital display

- 8. Control panel
 - 9. Sneak-A-Cup® interrupt feature
 - +10. Glass carafe with water and brewed
coffee markings (Part # CM9050C-04)
 - 11. Adjustable temperature keep
warm plate
 - 12. Adjustable retractable power cord
(not shown)
- Note:** † indicates consumer replaceable/
removable parts



CONTROL PANEL

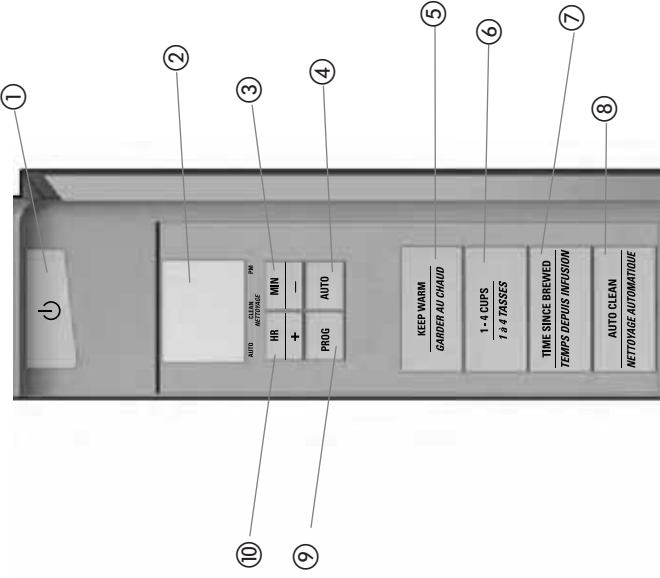

- Power I/O (ON/OFF) button:** Use to turn coffeemaker on and start brewing process. You can also turn coffeemaker off by pressing this button when the brewing cycle is complete.
- Digital display:** Displays time, once set, as well as indicators for auto programming, cup selection, warming plate, and auto clean.
- Minute button (MIN):** Use to display the correct minute when setting the time.
- Auto button (AUTO):** Press to activate delayed brewing. You may also press this button to make coffeemaker turn on at same preset time the next day.
- KEEP WARM:** Press to adjust temperature of keep warm carafe plate. Temperature can be set from levels 1 – 7; default setting is 4. Setting will show in display window.
- 1 – 4 CUPS:** Press to select a low-volume brew setting for making 1 – 4 cups of coffee. Icon will appear in display window.
- TIME SINCE BREWED:** Press to check freshness of brewed coffee. When pressed, display will show how long since coffee was made; time of day will reappear once button is released.
- AUTO CLEAN:** Sets auto clean function. Follow auto clean instructions in CARE AND CLEANING.
- Program button (PROG):** Use to program your coffeemaker to start brewing at a specified time for delayed brewing.
- Hour button (HR):** Use to display correct hour when setting time.


How to Use

This product is for household use only.


BEFORE FIRST USE

Warning: To reduce risk of fire or electric shock, do not immerse cord, plug or appliance in water or any other liquid.

- Remove all packing material and any stickers from product.
- Remove and save literature.
- Please go to www.prodprotect.com/applica to register your warranty.
- Wash all removable parts as instructed in CARE AND CLEANING section of this manual.

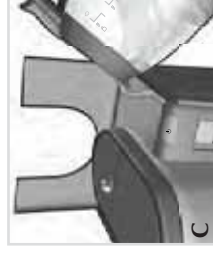

- Open water reservoir lid and using carafe, pour fresh cold water up to 12-cup level mark in water reservoir (C).
- Close water reservoir lid.
- Place empty gold tone or 8 to 12 cup basket style paper filter into removable brew basket.

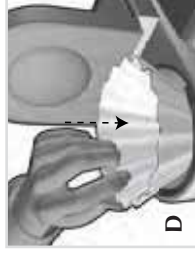

- Place basket into brew basket holder (D).
- Close brew basket lid.
- Close lid on carafe.
- Place empty carafe on adjustable keep warm carafe plate.
- Pull power cord out from power cord holder in back of coffeemaker and plug into standard electrical outlet.

- Brew water through appliance following BREWING COFFEE instructions, without adding coffee grounds.

Note: This removes any dust or residue that may remain in system during manufacturing process.

- Discard water from carafe and paper filter, if used, from brew basket.
- Turn off coffeemaker, unplug and allow to cool down.

ADJUSTING POWER CORD LENGTH

Tip: You can adjust length of power cord to suit your needs.

1. To increase length of power cord, simply grasp cord (not plug) in rear of coffeemaker and gently pull down and out of slot away from coffeemaker.
2. To decrease length of power cord, simply feed any excess cord into slot in rear of coffeemaker.

SETTING THE CLOCK

1. Plug appliance into standard electrical outlet.
2. Digital clock display flashes 12:00 (E).



Note: You must set display clock in order to use Delayed Brewing feature.



3. To change time, press HOUR (HR) button until correct time appears (F).

Note: When time passes noon, a small icon appears in bottom right corner of digital display to let you know you are in P.M. time. If P.M. indicator is not illuminated, time is A.M.



4. Repeat with MINUTE (MIN) button (G). (If minute setting is not changed within 5 seconds, clock will revert to default time and selection of hour and minute must be repeated.)


Tip: Hold buttons down to make hours and minutes change rapidly after a short delay. To change the time in 1-digit increments, press and release buttons.

Note: If coffeemaker is unplugged or power is interrupted even momentarily, display time may need to be reset.

BREWING COFFEE

Note: It is not necessary to set the clock to brew coffee unless you want to use Delayed Brewing feature.

1. Open water reservoir lid.

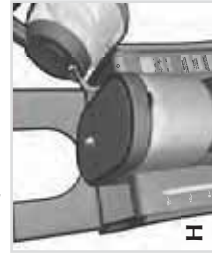

2. Fill water reservoir with desired amount of cold tap water using water markings on front of reservoir. Do not exceed 12-cup maximum level (H). Close lid on water reservoir.
3. If desired, place an 8 to 12 cup basket style paper filter into the removable brew basket, making sure filter is centered in brew basket. Otherwise, simply use and center your permanent gold tone filter.

4. Add desired amount of ground coffee.

5. Insert brew basket into brew basket holder following directions in GETTING STARTED.

6. Close brew basket lid.

7. Place brew-thru lid on empty carafe.

Note: Coffee may overflow if brew-thru lid is not properly aligned.

8. Place empty carafe on adjustable temperature keep warm carafe plate.

9. Plug cord into standard electrical outlet.



10. Press power I/O (ON/OFF) button; power light is illuminated. Brewing begins OR, to delay brewing, set auto function before pressing the power ON/OFF button (see DELAYED BREWING) (I).

11. When coffee stops flowing into carafe, brew cycle is complete.

12. Once coffee grounds have cooled, carefully open brew basket lid and using basket handle, remove and discard used grounds and paper filter (if used). Close brew basket lid.

13. Coffeemaker will keep brewed coffee hot for 2 hours and then automatically turn off.

14. To turn off coffeemaker at any time, press I/O (ON/OFF) button.

15. Unplug appliance when not in use.

SNEAK-A-CUP® INTERRUPT FEATURE

The Sneak-A-Cup® interrupt feature allows you to pour a cup of coffee from the carafe while coffee is brewing. When carafe is removed, brewing process is paused. Simply replace carafe on the carafe plate within 30 seconds and brewing resumes.

Note: If the carafe is not replaced within 30 seconds the brew basket may overflow.

ADJUSTABLE KEEP WARM CARAFE PLATE

1. Once coffee has brewed, press KEEP WARM button to select desired holding temperature of adjustable keep warm carafe plate.


2. Temperature range is from 1 (lowest temp) to 7 (highest temp).

3. When button is pressed, number "4" (medium temp) will appear in digital display.

4. Press HOUR (HR) button to increase setting and MINUTE (MIN) button to decrease set temperature.


BREWING 1 – 4 CUPS

When brewing small amounts of coffee, press the 1 – 4 CUPS button. CUP icon will appear on left side of digital display (K).

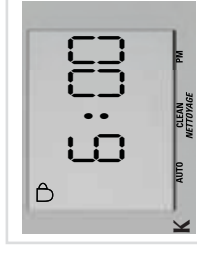

TIME SINCE BREWED FEATURE

To check freshness of brewed coffee, press and hold TIME SINCE BREWED button. The visual display will indicate how long ago last brewing was completed. When button is released, normal time display will appear. This feature will function until coffeemaker is manually turned off or after 2 hours when coffeemaker automatically turns off (L).

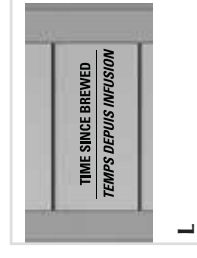

DELAYED BREWING

1. Follow steps 1 through 9 under BREWING COFFEE.

2. Make sure clock has been set to correct time of day.

3. Press PROGRAM (PROG) button; clock icon appears on left side of digital display.

4. Digital clock displays 12:00 or previous preset delayed brewing start time.

5. To change time, press HOUR (HR) button until desired correct hour appears on display. Repeat with MINUTE (MIN) button within 5 seconds. (If minute setting is not changed within 5 seconds, clock will revert to default time and selection of hour and minute must be repeated.)

6. Press PROG button again. Delayed brewing time is set and digital display returns to current time of day.

7. Press AUTO button to activate delayed brewing. AUTO indicator light will illuminate on digital display screen.

8. To check preset delayed brew time, press PROG button and display will show CLOCK icon and time selected for delayed brewing to begin. Press AUTO button to return to Delayed Brewing cycle.

9. To cancel AUTO brew, press AUTO button and then press power ON/OFF button to brew coffee, or press ON/OFF button again and coffeemaker will turn off; all lights will go out.



COFFEE BREWING TIPS

- Stir coffee in carafe before serving to evenly distribute flavor.
- Coffee that is poured during brewing cycle may vary in strength from finished brew.
- Not sure how much coffee to use? Begin by using 1 level scoop of medium grind coffee for each cup of coffee to be brewed.
- Never reuse coffee filters; they absorb flavors from brewed coffee and will give newly brewed coffee a stale flavor. They may also tear and allow grinds to drip into newly brewed coffee.
- Open coffee grounds are best stored in refrigerator in tightly sealed container. Once opened coffee should be used within 1 month.
- If carafe filled with coffee is left on keep warm plate, be sure to remove coffee grounds from brew basket as soon as they have cooled slightly. This will keep coffee from developing bitter taste.
- For special occasions, whip some heavy cream with 1 or 2 tablespoons of hazel nut, chocolate or almond liqueur. Use to top off each cup of coffee.
- Rinse the carafe and brew basket holder with warm water immediately after each use to maintain good coffee flavor.
- Keep your coffeemaker very clean; it affects the flavor of coffee.
- For iced coffee, brew coffee with twice the normal amount of grounds. Ice will dilute the coffee flavor. Or make coffee ice cubes from left over coffee and brew your coffee at its normal strength.
- Remember when pouring hot liquid into a glass, always put a spoon in the glass before adding the hot liquid.

Care and Cleaning

This product is for household use only.

This appliance requires little maintenance. It contains no user-serviceable parts. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

Caution: Do not overexpose control panel to water. Water may cause permanent damage and make coffeemaker inoperable.

1. Make sure coffeemaker is unplugged and cooled before cleaning.
2. Open water reservoir cover.
3. Remove brew basket by its handle and lift straight up.
4. If using paper filter, discard filter with grounds. If using permanent gold tone filter, discard grounds and rinse thoroughly in warm, sudsy water.
5. Clean parts as follows:

- Brew basket, carafe and lid are all top rack dishwasher safe; or they may be hand-washed in warm, sudsy water.
- Wipe exterior and adjustable keep warm carafe plate with a soft damp cloth.

Important: Do not use abrasive cleansers, scouring pads or steel wool. Never immerse coffeemaker in water or any other liquid.

CARING FOR YOUR CARAFE

- Do not allow all of the liquid to evaporate from the carafe while on the warming plate, or heat the carafe when empty.
- Discard the carafe if damaged in any manner.
- Never use abrasive scouring pads or cleansers; they will scratch the glass.
- Avoid rough handling and sharp blows.

AUTO CLEAN DECALCIFICATION SETTING

This coffeemaker automatically records number of times coffee has been brewed, to indicate when full decalcification cleaning is needed. When 60 cycles of coffee have been brewed, CLEAN light on digital display will be illuminated.

1. Combine 6 cups of white vinegar and 2 cups of cold water in carafe.
2. Pour into water reservoir. Close the lid.
3. If desired, place an 8 to 12 cup basket style paper filter into the removable brew basket; or simply use provided permanent gold tone filter. Insert brew basket into brew basket holder and close lid.
4. Press AUTO CLEAN to activate cleaning cycle. CLEAN light at bottom of digital display will be illuminated.
5. Part of the mixture will brew through. Remaining mixture will be held in coffeemaker for 30 minutes and then a signal bell will sound before completing its brew through.
6. There will be an audible signal when AUTO CLEAN cycle is complete.
7. Brew fresh water through appliance following instructions given in GETTING STARTED before brewing coffee again.

Important: Auto Clean may be activated at any time, simply by pressing AUTO CLEAN button.



WARNING /AVERTISSEMENT

RISK OF FIRE OR ELECTRIC SHOCK. DO NOT OPEN.

RISQUES D'INCENDIE OU DE SECOURS ÉLECTRIQUES. NE PAS OUVRIR.

The lightning symbol refers to “dangerous voltage”; the exclamation symbol refers to maintenance instructions. See below.

WARNING: To reduce the risk of fire or electric shock, do not remove the cover of the coffeemaker. There are no user-serviceable parts inside. Repair should be done by authorized service personnel only.

L'éclair représente une tension dangereuse. Le point d'exclamation indique qu'il s'agit d'importantes consignes d'entretien. Voir plus bas.

AVERTISSEMENT : Afin d'éviter les risques d'incendie ou de secousses électriques, ne pas retirer le couvercle de la cafetière. L'utilisateur ne peut réparer aucune des pièces internes. En confier les réparations uniquement au personnel d'un centre de service autorisé.

 **BLACK&DECKER** is a trademark of The Black & Decker Corporation, Towson, Maryland, USA

Marque de commerce déposée de la société *The Black & Decker Corporation*, Towson, Maryland, É.-U.



2008/7-1-2E/F

Copyright © 2008 Applica Consumer Products, Inc.

Made in People's Republic of China

Printed in People's Republic of China

Fabriqué en République populaire de Chine

Imprimé en République populaire de Chine